

# ASSEMBLY AND INSTALLATION INSTRUCTIONS


PD38807/PD38825

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE:** Before installing, consult local electrical codes for wiring and grounding requirements.

## Installation Steps

1. Attach the nipple to the mounting strap, and secure with a washer and a hex nut.
2. Attach the mounting strap to the ceiling box by using two mounting screws.
3. Choose a certain length of the chain you need, and weave the fixture wire and the grounding wire through the chain. Then connect one end of the chain with the fixture by using the loop lock.
4. Secure the top loop to the nipple tightly.
5. Thread the fixture wire and grounding wire through the collar, canopy, top loop, nipple and mounting strap in order.
6. Connect the other end of the chain with the top loop by using the loop lock.
7. Make wire connections with wire nuts:
  - Connect the smooth wire (marked) from fixture to the black wire from power source.
  - Connect the ridged wire(unmarked) from fixture to the white wire from power source.
  - Attach the grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully tuck wires back into the ceiling box.
8. Attach the canopy to the mounting strap by inserting the top loop, and then secure with the collar.
9. Place the glass shade into the decoration ring, attach them upwards to the glass holder, and then secure with the socket ring.
10. Install a bulb. **(Please do not exceed the maximum capacity that is recommended on the package.)**
11. Turn on the power at fuse or circuit box.

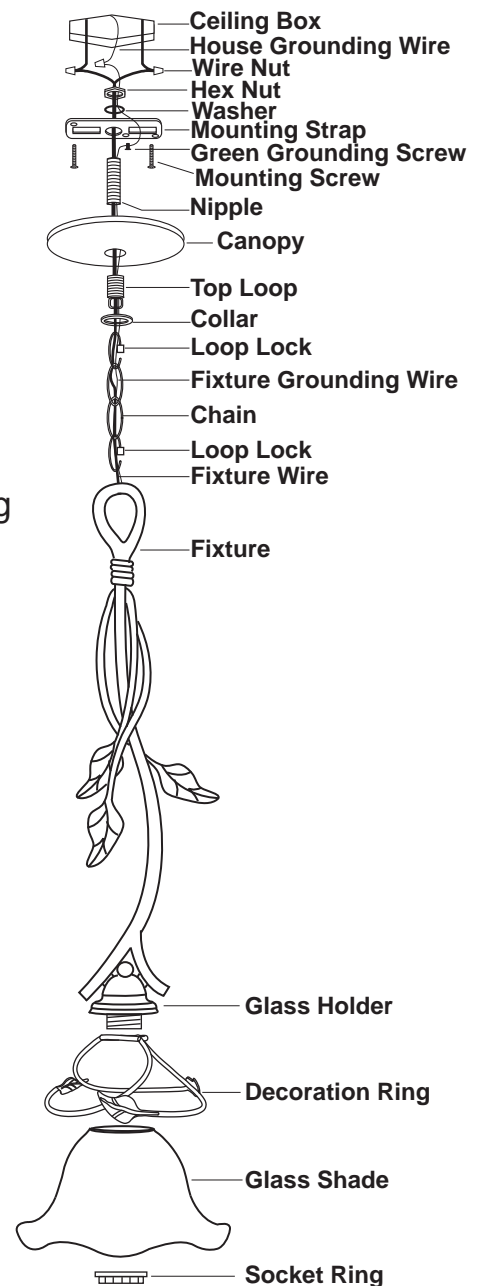

**VAXCEL**  
LIGHTING

050708