

# Read and save these instructions

**MODEL:KG350**

**CAUTION:** Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse box.

Step 1: Remove the screws from the switch box plate to allow easy wiring. Loosen the connection plugs from the switch box and fan. (Fig.1)

Step 2: Remove and discard the center plug from the switch box. Attach the light kit to the switch cup by feeding the wires and threading the light kit through the hole of the switch cup, secure it to the switch cup using the nut and lock washer. Be sure it is tight enough to prevent the light kit from vibrating loose. (Fig.1)

Step 3: Make the wire connections as follows and secure with the wire nuts provided:




- Connect white wire from the switch box to white wire from light kit.
- Connect blue wire from the switch box to black wire from the light kit.

Step 4: While holding the switch box, connect the connection plugs from the switch box and fan, slide the switch box up against the plate and align the screw holes. Secure the switch box to the switch box plate using the screws removed earlier. (Fig.2)

**CAUTION:** Make sure that the wires are not pinched between the switch cup and the switch cup plate.

Step 5: To install the light kit glass shades, remove the socket rings on the light kit and install the glass shades to the light kit. Secure by tightening the socket rings previously removed. (Fig.3)

Step 6: Install 4 x 13W E27 CFL (Included). DO NOT EXCEED MAXIMUM WATTAGE RATING.

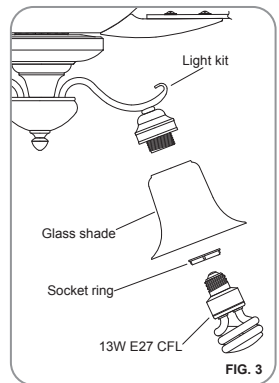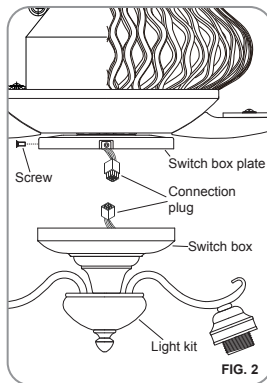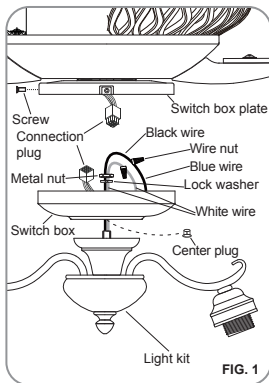

# Lea y guarde estas instrucciones

MODELO:KG350

**CUIDADO:** Apagar de comenzar con la instalación, desconecte la alimentación apagando el circuito del automático o quitando el fusible de la caja de fusibles.

**Paso 1:** Quite los tornillos de la placa de copa de interruptor para facilitar el cableado. Afloje las enchufes de conexión desde la caja del interruptor y ventilador. (Fig.1)

**Paso 2:** Retire y deseche la clavija central de la copa de interruptor. Conecte el aparato de luz a la copa de interruptor por los cables de alimentación y roscando el aparato de luz a través del agujero de la copa de interruptor, fíjelo a la copa de interruptor usando la tuerca y arandela de cierre. Asegúrese de que esté suficientemente apretado para evitar que el aparato de luz se suelte por la vibración. (Fig.1)

**Paso 3:** Realice las conexiones del enchufe polarizadas:

- Conecte el alambre blanco de la caja del interruptor con el alambre blanco del juego de luz.
- Conecte el alambre azul de la caja del interruptor con el alambre negro del juego de luz.

**Paso 4:** Mientras toma la copa de interruptor, chasque firmemente los enchufes de conexión de alambre juntamente, deslice la copa de interruptor contra la placa y alinee los orificios. Asegure que la copa de interruptor a la placa usando los tornillos eliminados antes. (Fig.2)

**CUIDADO:** Asegure que los alambres no sean pelliscado entre la caja del interruptor y el plato de la caja del interruptor.

**Paso 5:** Para instalar el Pantallas de vidrio, retire los anillos hueca en la luz instalar las pantallas de vidrio para la luz. Asegúrela apretando los anillos de toma, previamente eliminados. (Fig.3)

**Paso 6:** Instale 4 x 13W E27 CFL (Incluidos). NO EXCEDE EL VOLTAJE NOMINAL MÁXIMO.

